

Assembly Instructions for: R2929



Warning: Choking Hazard
Assembly hardware contains small parts. **Adult assembly required.**



Warning: No Climbing Units are not intended for children to climb on and it is recommended that units **over 32 inches tall** be **attached to a wall to prevent tipping.**



Required Tools:
Medium Size
Phillips Screwdriver


Instructions: Unbox unit and find hardware bag inside of box.

To hinge the R2929 together follow these instructions:


(Note: Attach the unit together at the hinges before attaching Top hasp)

- 1 - Set units face to face as shown in illustration at right # 1.
- 2 - Unit has hinges mounted on one side unit already. Making sure the two units are together as shown in illustration #1, fasten the other side of the hinge to the unit with the screws provided.
- 3 - Next go to the opposite side of the unit and fold over the hinged part of the hasp and place the lock part underneath and through the hasp. Holding the lock part in place so it does not move, open the hasp and mark where the holes are for the mounting screws. Screw the lock part of the hasp centered on the marks.
- 4 - Attaching the optional second hasp if wanted. Fold units together and close the top doors. Mount the top hasp approximately in the center of the two blue doors and attach the pivot side of the hasp first, then the lock part as you did in step 3.

#1

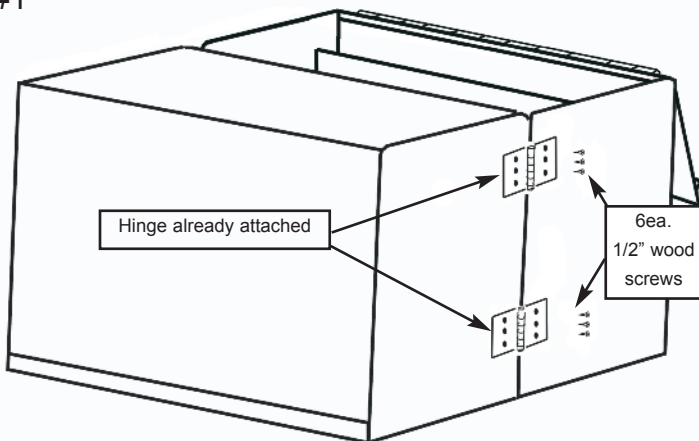

#2

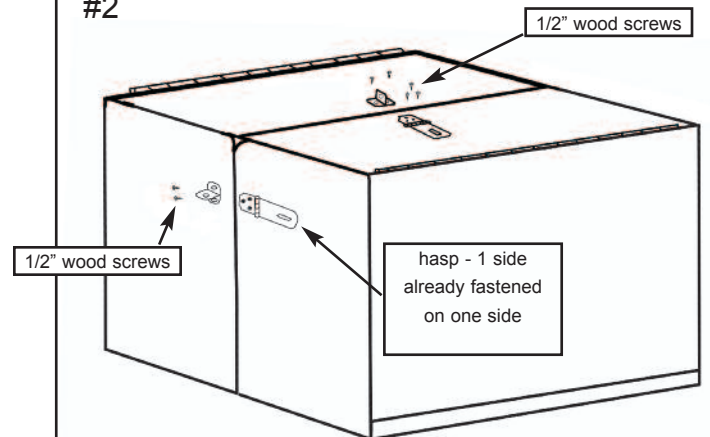

If you have any difficulties assembling this product, please call Childs Play Customer relations at (800) 447-8375 or email us at mail@childsplay1.com
Childs Play 131 Yorktown, Dallas, Tx. 75208
www.childsplay1.com